

# EA1 and EA3 Wall-Mount Bracket Installation Guide

## Box contents

- C4-WMEA1 EA1 Wall-Mount Bracket (sold separately)
- OR**
- C4-WMEA3 EA3 Wall-Mount Bracket (included with C4-EA3 controller or sold separately)

## Description

These wall-mount brackets are designed specifically for use with the EA1 Entertainment and Automation Controller (C4-EA1) or the EA3 Entertainment and Automation Controller (C4-EA3). The brackets provide several mounting options, such as on-wall or behind a TV in various orientations. The brackets have VESA-standard hole sizes of 75 mm, 100 mm, and 200 mm for use on the back of a TV or monitor when the VESA mounts are not in use. Several wall mounting options are available as well, including standard US single-gang and double-gang box mounting.

## Installing the bracket

### To mount the bracket behind the TV

For most TVs, the VESA mounts are unused when the original TV stand is in use. The bracket can be installed in either a horizontal or vertical orientation, depending on the requirement of the installation.



**Note:** Use the mounting screws that came with the TV. Using a longer screw may damage the TV.

### VESA hole patterns shown in the photo:

- A** 75 mm
- B** 100 mm (only two holes for the EA1 bracket)
- C** 200 mm (only on the EA3 bracket)


### To mount the bracket to a wall box

A standard US single-gang or double-gang wall box can be used to install the wall-mount bracket. This option is for convenience only, and high-voltage wiring should *not* be located in the gang box when using this option.

Be careful when inserting and removing the controller from a bracket attached to a single-gang wall box. Due to tight tolerances required for safety reasons, improper removal of the controller could result in damage to the wall box or bracket. See the removal instructions on how to properly remove the controller from the wall-mount bracket.

### Wall box hole patterns shown in the photo:

- D** Single-gang wall box
- E** Double-gang wall box

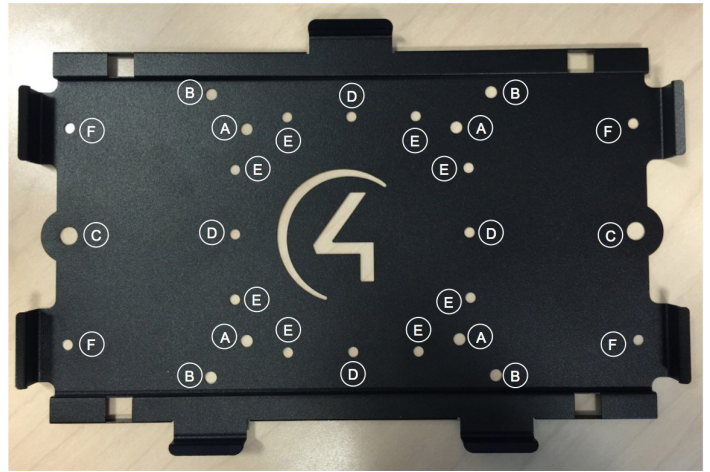

To mount the bracket directly to the wall or other flat surface

Proper hardware (not included) should be used, depending on the material that the wall-mount bracket will be installed on.

### Direct wall installation hole pattern shown in the photo:

- F** Wall or flat surface installation

## Attaching and removing the controller from the bracket

### To attach the controller to the bracket:

- 1 Orient the front of the controller toward the top of the bracket (the top has a single tab.)
- 2 Place one side of the controller into the bracket, and seat it firmly. Note that the top and bottom tabs should be touching the front and back of the controller.
- 3 Firmly press the other side of the controller into the bracket until the controller locks into the bracket. When properly set, the controller should be firmly in place, level with the wall mount and not able to move back and forth.

### To remove the controller from the bracket:

Because of tight tolerances, be careful when removing the controller from the bracket. Do not try to pull the controller directly away from the bracket, because doing so can damage the bracket and wall.

- 1 On one side of the controller, place your fingers behind the controller, between the two locking tabs.
- 2 While applying pressure toward the opposite side of the controller, gently pull the other side of the controller away from the bracket. It may be necessary to pry the locking tabs slightly to help remove the controller. Be careful not to damage the tabs, so the wall-mount bracket can be reused.

## Regulatory and safety information

To review regulatory information for your Control4 products, see the information located on the Control4 website at: [ctrl4.co/reg](http://ctrl4.co/reg).

## Warranty

Visit [www.control4.com/warranty](http://www.control4.com/warranty) for details.

## More help

For the latest version of this document and to view additional materials, open the URL below or scan the QR code on a device that can view PDFs.



Control4®

control4.com | 888.400.4070

Copyright ©2015, Control4 Corporation. All rights reserved. Control4, the Control4 logo, the 4-ball logo, 4Store, 4Sight, Control My Home, Everyday Easy, and Mockupancy are registered trademarks or trademarks of Control4 Corporation in the United States and/or other countries. All other names and brands may be claimed as the property of their respective owners. All specifications subject to change without notice.

**A**  
200-00400-A  
2015-07-31 DH